
Front Panel Removal and Installation


Safety Notice

Disconnect power before removing the front panel.

Remove Front Panel

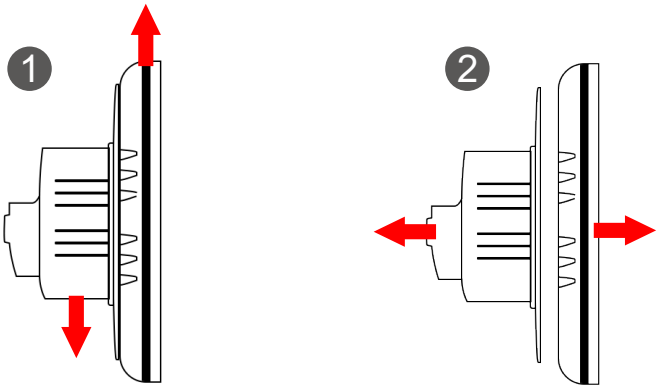

Install Front Panel

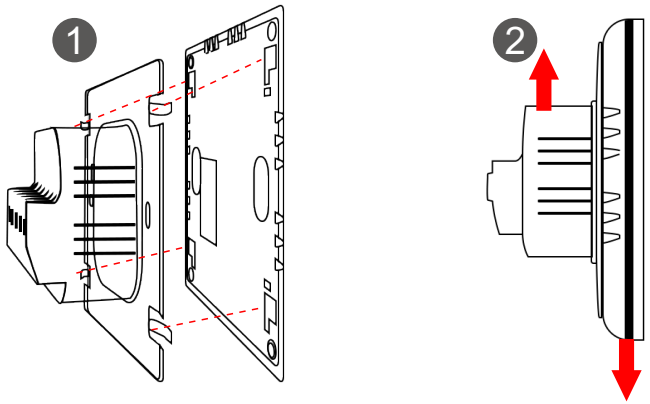


Note:

Keep the power disconnected while removing or reinstalling the front panel. Restore power only after the panel is securely installed.


Wiring Diagram

⚠IMPORTANT: ①Neutral wire required. ②Turn off power before installation. ③Professional installation recommended.


4 gang smart switch

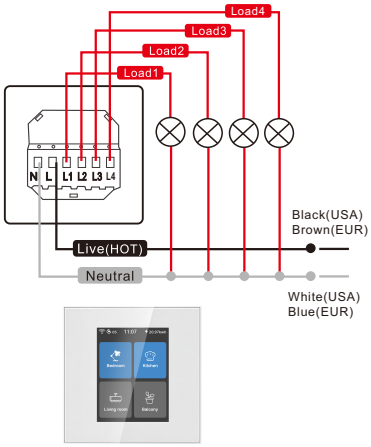


2 curtains switch

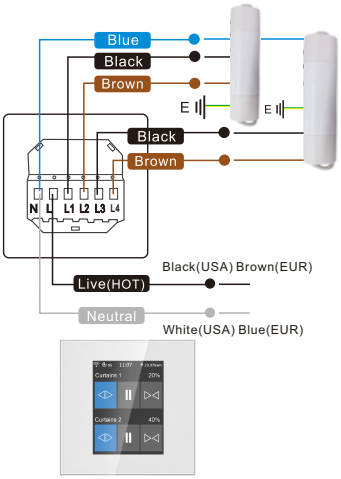

2 gang +1 curtains switch

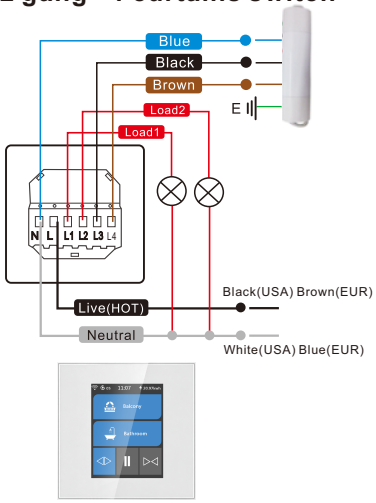


1 gang +1 curtains switch

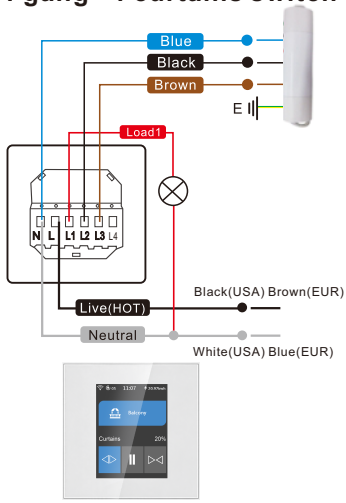

Installation Diagram


⚠ Turn off the power before installation. Remove the front panel before wiring.

1 Use a compatible mounting box. Figures 1 and 2 show European mounting boxes, while Figure 3 shows a US mounting box.

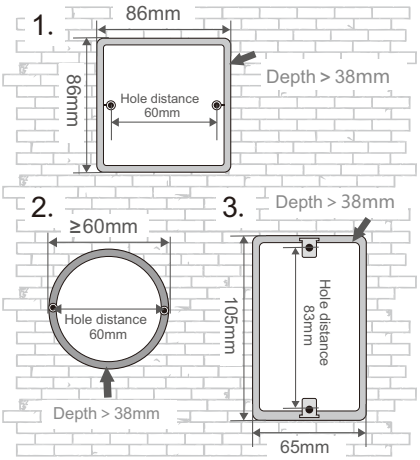


2 Before turning on the power, verify that all wires are connected correctly according to the wiring diagram.

- Terminal screw: M3
- Tightening torque: 0.5 N·m
- Suitable Wire Size:24-12 AWG

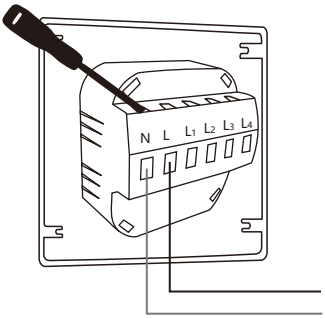

3 Secure the switch to the mounting box using the supplied screws.

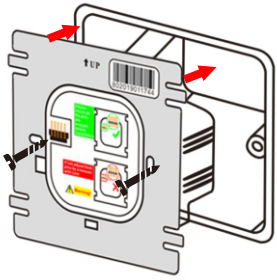

⚠ Make sure the front panel clicks firmly into place. Incorrect installation may damage the pins or cause the device to malfunction.

4 Attach the front panel securely, then restore power.

